

PhageGuard Listex reduces Listeria on food contact surfaces

Advantages of Phage Application

- Food Contact Surfaces:
 In 3 hours, 5% PhageGuard
 Listex reduces Listeria by 3.3
 logs on stainless steel, 2.8 logs
 on conveyor belt & 1.8 logs on
 epoxy flooring (R.G Reinhard et
 al., 2020)
- **Biofilms:** 1% PG Listex reduces newly formed or aged Listeria biofilms by 3.6 -5.6 – logs (K. Soni *et al.* 2010)

Green

- Organic OMRI listed food processing aid
- Food grade with no effect on odor, color & texture
- No detrimental effect on personnel or oxidizing effect on equipment surfaces

Easy

- Easy to apply
- Spray on Food contact surfaces during processing or after sanitation

PhageGuard Listex - The natural solution against Listeria

PhageGuard Listex is a highly concentrated solution containing phage P100. P100 is selected from nature for its killing ability against *Listeria monocytogenes*. PhageGuard Listex is also effective against all Listeria strains.

Application of PhageGuard Listex

Listeria monocytogenes has a persistent ability to form biofilms matrices in Food Contact Surfaces (FCS) like conveyor belts and freezer tunnels. directly on equipment and will not have an organoleptic influence on the end product.

PhageGuard Listex	
Dosage	 FCS & Biofilms: 1 - 5% solution on stainless steel and conveyor belt shows 2-3 logs kill (>99%). FPE: 1- 5 % solution
Distribution	Hand-held garden sprayer (picture)
Application techniques	Spray onto food contact surfaces during production.Use as the final sanitation step in the environment.
Contact time	Allow minimum of 1 - 3 hours after application. FCS: Daily Biofilms: Daily until removed

Advantage over chemical sanitizers PhageGuard Listex can be applied during processing, directly on equipment and will not have an organoleptic influence on the end product.



How to use



Rinse surface area to treat with phages

- Rinse off other chemical cleaning agents from the surface if used before.
- Do NOT let chemical residues come in contact with prepared phage solution.
- Use phage solution as a last step in your sanitizing procedure.



Prepare fresh 1 - 5% PhageGuard solution

- Use clean, rinsed spray canister/installation. Do NOT let chemical residues come in contact with prepared phage solution.
- Use dechlorinated water (Cl <1 ppm). A chlorine filter will remove chlorine from water.
- Dilution 1 %: add one 100mL bottle of PhageGuard for 2.5 gallons of water.
- Dilution 5 %: 5 X 100 mL bottles for 2.5 gallons of water.
- 2.5 gallon of phage solution can treat approx. 1000 ft².
- Prepared solution can be stored refridgerated (39 °F) for 48 hours only.

Spray phage solution

- Spray on surface until visibly wet. No need to rinse after spray.
- Phages work up to 24 hours upon treatment. Recommend to spray end of shift so has phages to work overnight/weekend.
- Food contact surfaces: recommeded to spray daily.
- **Biofilms:** Spray 1 3 times after area has dried. Swab, if tested positive repeat until Listeria will test negative for 3 consecutive days. Biofilms should be eradicated in 2-7 treatments.
- Leftover phage solution should be stored refridgerated (39 °F).



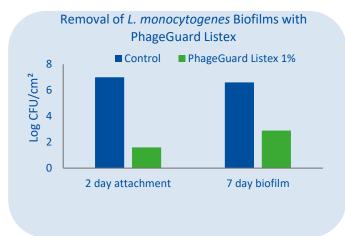


Figure 1. PhageGuard Listex reduces Listeria by 5.6 – 3.6 logs in newly formed or aged biofilm.

Scientific research by K. Soni *et al.* (2010), demonstrated the effectiveness of PhageGuard Listex on newly formed and aged Listeria biofilms on stainless steel (Figure 1) and R G. Reinhard *et al.* (2020), on Listeria contaminated contact surfaces such as stainless steel and epoxy flooring (Figure 2).

- Biofilms: PhageGuard Listex kills Listeria in newly formed or aged biofilms by 3.6 -5.6 - logs (Figure 1).
- Food contact surfaces: In 3 hours, PhageGuard Listex reduces Listeria by 3.3 logs on stainless steel, - 2.8 logs on conveyor belts and 1.8 logs on epoxy flooring (Figure 2).



Figure 2. On Food contact surfaces, 5% PhageGuard Listex kills Listeria up to 2.2 – 3.3 logs on stainless steel, 2.2 – 2.8 logs on conveyor belt and 1.5-1.8 logs on epoxy flooring in 1 to 3 hours.

For more information regarding this application data bulletin please use the following contact information:

Micreos Food Safety B.V.

Nieuwe Kanaal 7p 6709 PA Wageningen The Netherlands Tel: +31 (0)888 007 151 info@micreos.com

www.phageguard.com

